

Animated Holiday House with Lights and Music

ITM. / ART. 29699 (JP)

Product Manual

✉ customerservice@natures-mark.com



1-877-378-3150 (8 a.m. - 5 p.m., PST, Monday - Friday. English only.)

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

- Carefully remove the product and accessories from package. Keep packaging for safe storage.
- Place the product on a flat, stable surface close to a power source. The area surrounding the item should be clear of any obstructions.
- Plug one end of the adapter into the DC jack located at the back of item, and the other end into an electrical outlet.
- The product is operated by the two-way switch at the back of item. Slide the switch to '●' position to activate lights, music and animation, and turn the switch to '○' position to turn off product.
- Rotate the dial to adjust the volume of the music.

TROUBLESHOOTING:

If the product is not functioning, check for the following problems:


- The switch is in '○' position.
- The power source is disabled or the cord may be unplugged.
- The moving mechanism may be blocked by debris or an obstruction.

CAUTION:

- When not in use and being packed away, please unplug adapter from DC jack.
- The bulbs of this lighted item cannot be replaced.

WARNING:

- This is an electrical product! To avoid risk of fire, burns, personal injury, and electric shock, close supervision is necessary when the product is used by or near children.
- This is not a toy. For decorative indoor use only.
- Only adapters of same or equivalent type are recommended.
- This seasonal use product is not intended for permanent installation or use.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended for an extended period.
- Do not restrict the movement of any revolving component to avoid damage.
- Do not use this product for other than its intended use.
- Do not use an extension cord unless the plug can be fully inserted.
- Do not alter or replace the plug.
- When not in use, store neatly in a cool, dry location protected from sunlight.
- Do not connect the chain to the supply while in packaging.
- For decoration purposes only.
- The light source is not intended for use in other applications.
- Read and follow all instructions that are on the product or provided with the product.

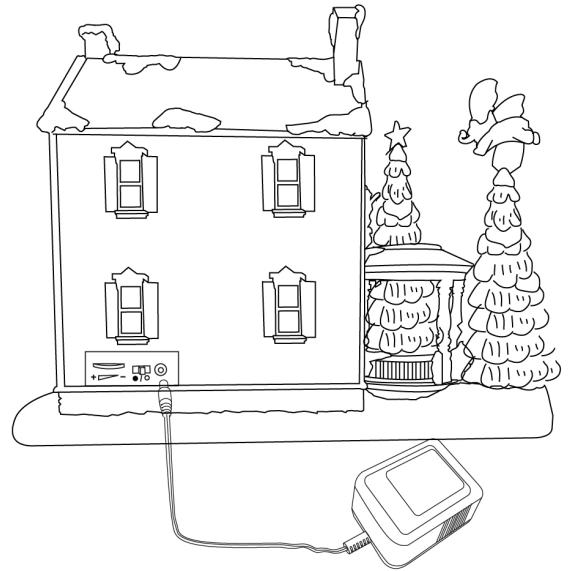

MADE IN CHINA

Animated Holiday House with Lights and Music

ITM. / ART. 29699 (JP)

取扱説明書 <和訳>

✉ customerservice@natures-mark.com



1-877-378-3150 (平日 8 時~5 時/米国太平洋標準時、英語のみ)

重要：よくお読みになり、今後の参考のために大切に保管してください。

- 慎重に製品と付属品をパッケージから取り出してください。安全に保管いただくためにパッケージは捨てずに保管してください。
- コンセント差込口に近い、平らで安定した場所に製品を置きます。製品の周囲には障害物が無いようにしてください。
- 製品の背面にある DC ジャックにアダプターを差込み、反対側の端をコンセント口に差し込みます。
- 本製品は、アイテムの背面にある Two-Way スイッチにより稼働します。「●」位置にスイッチをスライドさせると、ライト、音楽、アニメーションが稼働し、「○」の位置にスイッチをスライドさせると、稼働が止まります。
- ダイアルを回し音楽の音量を調整してください。

困ったときは：

製品が機能しない場合、以下の点をご確認ください。


- スイッチが「○」の位置にある。
- コンセントに電気が通っていない、またはコードが抜かれている。
- 移動パーツが破片や障害物によって止められている。

注意：

- 使用しないとき、保管する際は、DC ジャックからアダプターを抜いてください。
- この製品の電球を交換することはできません。

警告：

- これは電気を使用する製品です！火災、やけど、けが、感電の危険を回避するために、お子様が使用したり、近くにいる際は厳重に注意してください。
- これは玩具ではありません。屋内で装飾品としてのみご使用ください。
- 同等タイプのアダプターのみ推奨いたします。
- 本製品は季節商品であり、永続的な使用/設置を意図しておりません。
- 家を不在にする際、就寝する際、長期間放置する際は製品のコードを抜いてください。
- 破損、故障を避けるため、稼働パーツの動作を無理に止めようとししないでください。
- 本目的以外に製品を使用しないでください。
- プラグを十分に挿入させることができない際は、延長コードを使用しないでください。
- プラグを改造したり、交換しないでください。
- 使用しない際は、直射日光を避け、乾燥した冷暗所に丁寧に保管してください。
- 包装されている状態で、チェーンを本製品に接続しないでください。
- 装飾の目的にのみ使用してください。
- 光源を他の用途で利用することはお控えください。
- 製品にあるすべての説明をよく読み、その内容に従ってください。

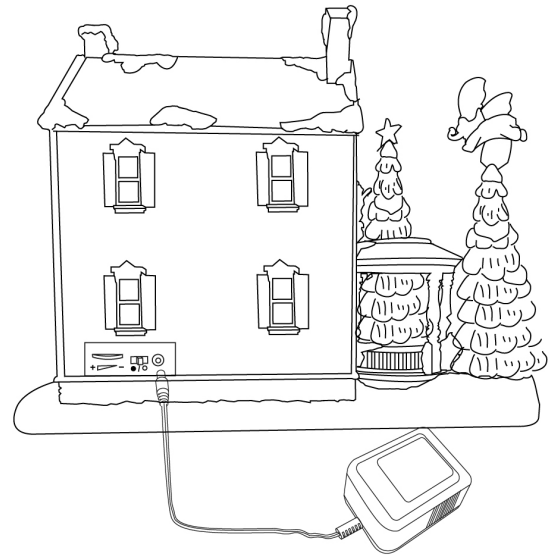

Costco Wholesale Japan Ltd.
2 Kakuchi, 2 Gaiku, Kaneda-Nishi
361 Urikura, Kisarazu shi
Chiba, 292-0007 Japan
0570-200-800
www.costco.co.jp

中国製